Application Note Product: L5300 / L5392

DRIVES

Document Number: 5101 Keywords: Self-test

Objective

To diagnose a L5300 or L5392 has a possible hardware problem.

Equipment

L5300 Link Rack or L5392 Link Op Station and a PC

Procedure

- 1. Open the TERMINAL program on your computer
- 2. Verify under settings that the baud rate is 2400
- 3. Select your Comm port
- 4. Disconnect the AC power to the Link 2 unit
- 5. Remove the back cover
- 6. Plug in the Comm cable to the Link unit
- 7. Apply AC power

The following should be displayed on the computer screen

SELF TEST

BOARD: OK L5392

 
EPROM: OK SRAM: OK NOVRAM: OK

FLASH: OK (USED)

65535: OK VDRAM: OK

Done.

Note: If something like the following is displayed the Baud Rate is set incorrectly.



- 8. Remove AC power
- 9. Install Back Cover to insure proper operation of Link unit

If you have questions, please call the Product Support Group at (704) 588-3246.

10-May-02 Page 1 of 1