



Objective

Copy (clone) a drive configuration from drive to drive.

Equipment

Keypad 5841 for 584SV drive

Keypad 6051 for 605 drive



Procedure

1. Press the "E" key three times.
2. Follow the menu structure below to save the configuration into the keypad.
4. Plug Keypad into the next drive.
5. Repeat Step 1 to reset the menu level.
6. Follow the menu structure below to load the keypad's configuration into the drive.

Key	MMI Msg	Operation
	AC Vector Drive 2.2 kW 230V 5.1	Welcome Screen
(M)	Operator Menu menu at level 1	Press 'M' once
(▲)	Parameter Save menu at level 1	Press <UP> arrow once
(M)	Save to Memory menu at level 2	Press 'M' once
(▲)	Save to Op menu at level 2	Press <UP> arrow once
(M)	Save to Op "UP" for ACTION	Press 'M' once
(▲)	Save to Op Complete	Press <UP> arrow once

3. The keypad will display COMPLETE when finished.

Note: The MENU LEVEL should be set to ADVANCED.

Key	MMI Msg	Operation
	AC Vector Drive 2.2 kW 230V 5.1	Welcome Screen
(M)	Operator Menu menu at level 1	Press 'M' once
(▲)	System menu at level 1	Press <UP> arrow once
(M)	Restore Defaults menu at level 2	Press 'M' once
(▲)	Load from Op menu at level 2	Press <UP> three times
(M)	All Parameters menu at level 3	Press 'M' twice
(▲)	All Parameters "UP" for action	Press <UP> arrow once

7. The keypad will display COMPLETE when finished.

If you have questions, please call the Product Support Group at (704) 588-3246.